

METRO

PIZZA HUT WAREWASHING SINK SHELVING UNIT Model #PHWSS36

Components:

- Wall System allows for air drying and storage of Utensils, Lids and Containers


Sanitary: All components are finished in Metroseal III epoxy finish containing Microban.

Microban deters the growth of bacteria and mold.

NSF:

All components are manufactured per the NSF specifications and are NSF listed.

Place Shelving Unit on same
side as the Dish Washer

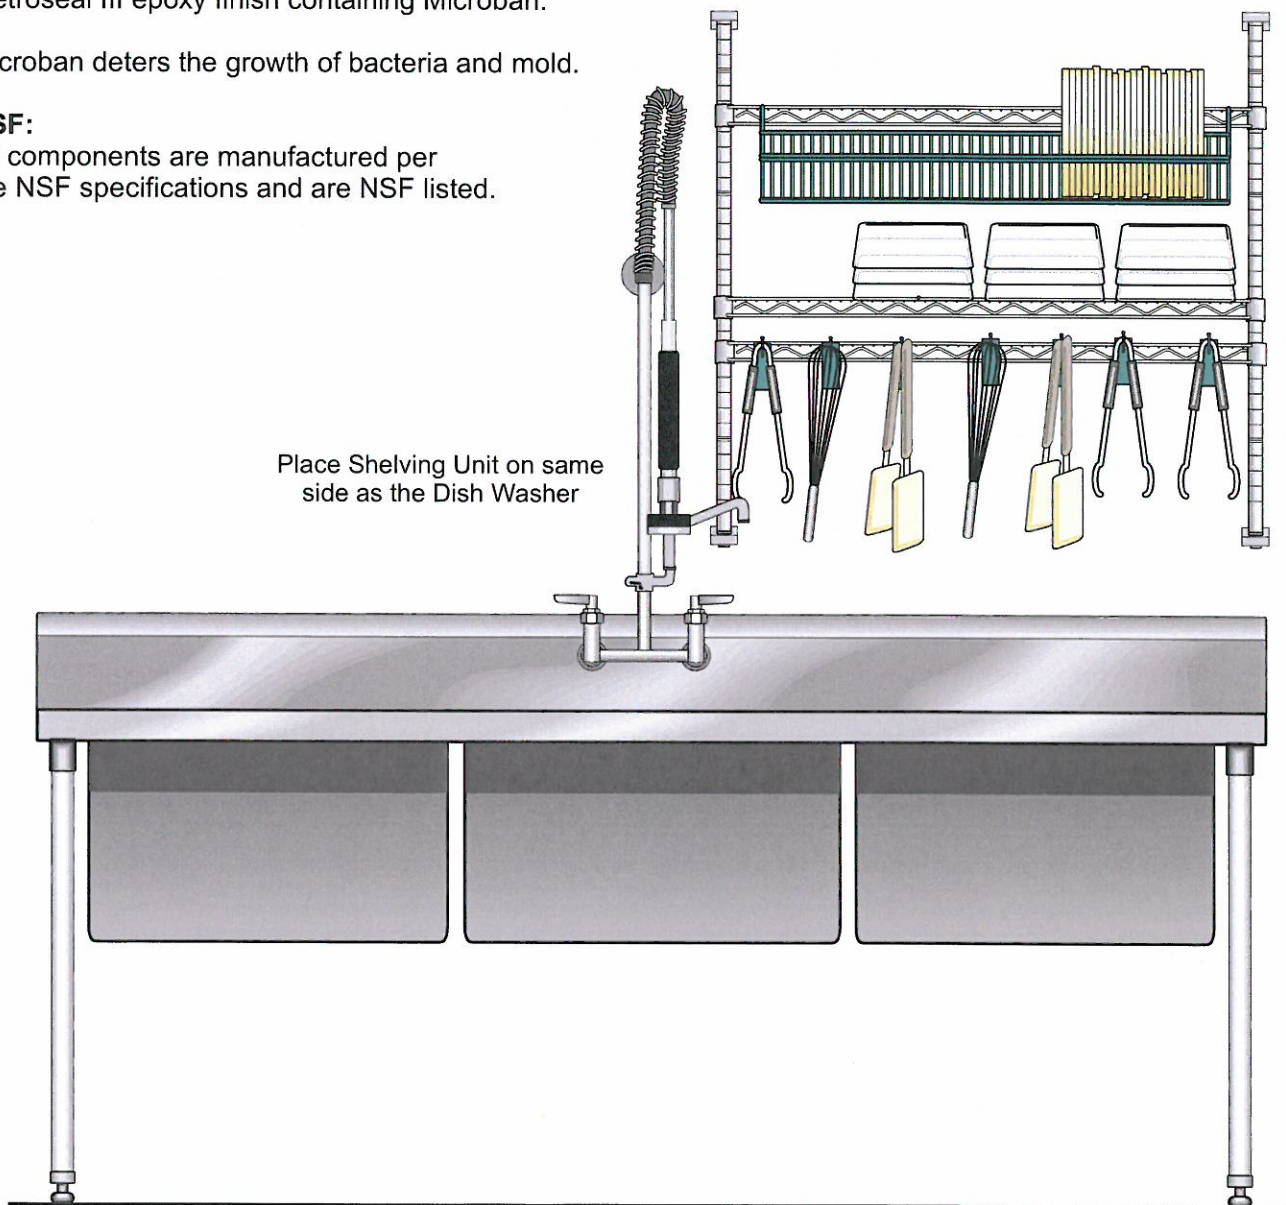**METRO**

InterMetro Industries Corporation
North Washington Street
Wilkes-Barre, PA 18705
www.metro.com

INSTR-PHWSS36
091712

PIZZA HUT WAREWASHING SINK SHELVING UNIT MODEL #PHWSS36



A S S E M B L Y M A N U A L

**This is suggested
as a 2 person installation.**


TOOLS REQUIRED:

Adjustable Wrench
Rubber Mallet
Pencil
Level
Measuring Tape
Drill
1/2" Drill Bit for Anchors
Phillips Head Screwdriver
(8) Toggle Anchors (3/16"-24)


PARTS:

- (2) 33PDFK3, 33" Posts with Wall Brackets
- (2) H136K3, 36" hanger Rails
- (1) GS1830K3, 18"x30" Top Shelf (Hangs from Top Hanger Rail)
- (1) 1430NK3, 14"x30" Bottom Wire Shelf
- (7) PGHK6K3, Hooks

- 1 Mark wall and drill holes.**
- Mark wall with an "X" at each point indicated.
 - Measurements are from center to center of each "X" mark
 - Drill all marked locations using a 1/2" drill bit.

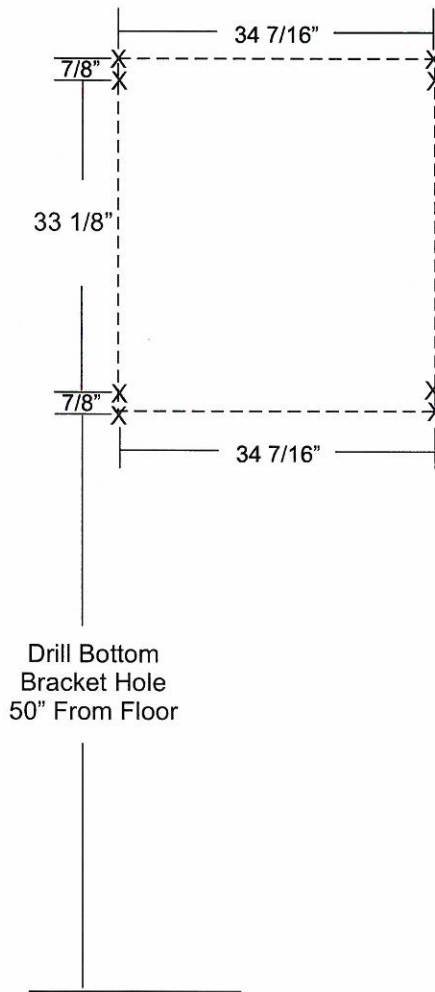

- 2 Install anchors.**
- Using 3/16-24 Toggle Bolt install into each hole.
 - Note; Suggested anchors are the 3/16-24 Toggle Bolts with plastic legs.
 - Once through, make sure that the metal part of each is sideways and does not interfere with the other anchor
 - Push the plastic tab all the way forward until flush with the wall
 - Break off plastic legs

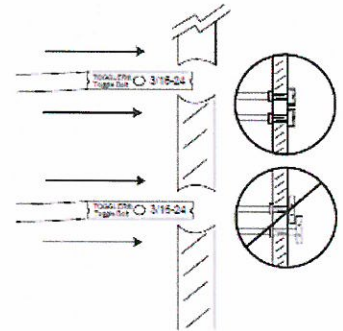

- 3 Install Wall Brackets.**
- Each Post requires 2 Wall Brackets (top and bottom)
 - NOTE** - Center Brackets will also be included but they are not used in this application. They can be discarded.
 - The Wall Brackets use the two top and two bottom markings.
 - Install all Wall Brackets so so the flat side is up



INSTR-PHWSS36
091712


PIZZA HUT WAREWASHING SINK SHELVING UNIT MODEL #PHWSS36

METRO

A S S E M B L Y M A N U A L


4 Unit Assembly.

- Remove the bolts from the ends of each Post.
- NOTE; The TOP of each post is indicated by the groove closest to the end (about 1/2")
- Assemble the unit on the ground as indicated

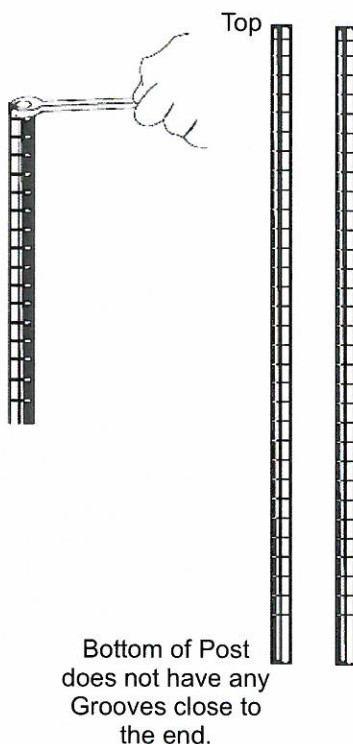


5

Assemble the unit PRIOR to putting it on the wall.

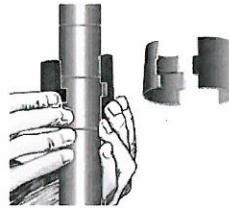

NOTE - Each component comes with a bag of Split Sleeves.

- Split Sleeves are made up of 2 halves.
- The bead on the inside is located towards the TOP of the Split Sleeve
- The bead clicks into the groove on the post

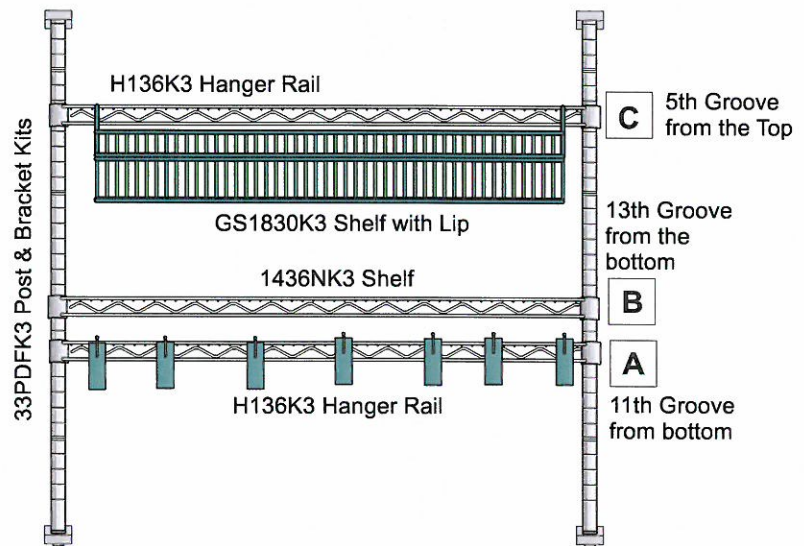

6

Place the Unit on the Wall Brackets.

- Place assembled unit onto Wall Brackets and screw in the bolts on TOP Wall Brackets slightly to stabilize the unit.
- Attach the bottom of the unit to the bottom Wall Bracket with the bolts.

NOTE - You will receive (2) center brackets that will not be used in this application. They can be discarded.



INSTR-PHWSS36
091712